

# Events

## PARTY & TENT RENTALS



### Island Oasis Instructions

This unit requires a dedicated 20 amp outlet!!

**Make sure the black drain hose is connected underneath the unit and you have the dispenser in place to catch water from the hose!!**

1. Plug unit into dedicated 20 amp outlet, fill clear hopper on top of machine with ice and replace lid securely. When lid is placed on correctly, a red light will come on.
  - **Do Not Place Large Pieces of Ice in the Hopper – it will jam the machine -**
2. Measure liquid into the Pitcher
  - You can make up to 3 – 12oz drinks in a pitcher at a time
  - Use the recommended amount of liquid for the number of drinks

Example:

12 oz. Cocktail:	4 oz Strawberry Mix
	1.25 oz Rum
12 oz. Smoothie:	5 oz Strawberry Mix
	1 oz of water, if needed

If making 2 drinks, double the amount of liquid  
If making 3 drinks, triple the amount of liquid

  - If using a frozen drink mix, thaw it before making the drinks
3. Press the preset button which automatically shaves and blends your mix into individual portions.
  - Button #1 = 1 drink
  - Button #2 = 2 drinks
  - Button #3 = 3 drinks
4. Push shave button until desired amount of ice is in the pitcher and press the mix button.
5. If mixture is too thick, add water or liquor to dilute and mix again. Make sure lid of pitcher is on properly or unit will not work.
6. If the mixture is too thin, press the manual shave button and then the manual mix button.

\*\*\*If unit is not working:

Remove all large chunks of ice

Try adding a little hot water to free up the ice scrambler

Make sure the hopper lid is pressing down the white rod for contact.

Turn unit off and press reset button on back of machine and try again.\*\*\*

**Events Party & Tent Rentals, LLC**  
**2 Main St PO BOX 205**  
**Georgetown, CT 06829**  
**(203) 544-7368 Fax (203) 544-0009**  
**www.eventsct.com**