

Events

PARTY & TENT RENTALS



Black Light Directions **P64 LED UV – American DJ**

This light can be used in a 2 primary modes:

Manual Mode – light on constantly with a pre-set light intensity and strobe speed

Sound Active mode – light comes on & off with sound

Manual Mode:

1. Plug the fixture in.
2. Put dipswitches #9 and #10 in the “ON” position.
Note: You will find 10 small switches/levers on the back of the light. These levers can be put up (“ON”) or down (“OFF”) to set.
3. Adjust the other dipswitches to adjust the intensity and strobe speed:
 - a. Dipswitches #1 - #4 controls the intensity of the light.
 - Lowest Intensity: #1- “ON”
 - Brightest Intensity: #1, #2, #3 & #4 - “ON”
 - b. Dipswitches #5 - #8 controls the strobe speed.
 - No Strobe – #5, #6, #7 & #8 - “OFF”
 - Slow Strobe - #5 - “ON”
 - Fastest Strobe - #5, #6, #7 & #8 - “ON”

Sound Active Mode:

1. Plug the fixture in.
2. Put the dipswitch #10 in the “ON” position.
3. The fixture will now change when music or other sounds occur.