



Events

PARTY & TENT RENTALS

Convection Oven Instructions

1. Place oven on a sturdy counter/table and plug it into a dedicated 20 amp outlet.
2. Set the temperature knob to the desired level. The preheat indicator light will be illuminated when there is heat being added to the cooking chamber. The light will go out when the correct temperature has been reached.
3. There is a timer on the oven which you can use. Turn the knob clockwise to set the cooking time for up to 120 minutes. The oven will shut off after the set time has elapsed.
4. To activate the broiler/browning feature, turn the control dial beyond 500F to the furthest point. You will feel a slight resistance as you turn the dial. Beyond this resistance point the browning feature is activated. This feature should be used for no more than 45-60 minute cycles.

Note: The oven fan operates in browning/broiling mode.

Important Reminders

Use a dedicated 20 amp outlet!

This oven has hot surfaces.

Use pot holders when removing items from the oven.

Troubleshooting:

If the oven is not turning on, unscrew the black knob on the back of the oven and press the reset button. If this doesn't work, please call us at 203-544-RENT (7368)