



# Events

PARTY & TENT RENTALS

## **Dance Light Directions Revo III – American DJ**

For best effect, this light should be used in the Sound Active Show Mode. The lights will run to the beat of the music.

1. Plug the fixture in.
2. Tap the MENU button until “ShOd” is displayed. Press ENTER.
3. Tap the UP or DOWN buttons until you find your desired show. Press ENTER.