

# Events

PARTY & TENT RENTALS



## Hot Dog Machine Instructions

**This hot dog machine requires a dedicated 20 amp outlet!**

1. Place hot dogs in the carousel. Machine can hold up to 40 hot dogs at one time.
2. When ready to begin cooking, move power switch to ON position. This will start to rotate the rotisserie.
3. Move heat control to desired temperature. Using average sized hot dogs with heat control set on HIGH, it will take approx. 10 – 15 minutes for the hot dogs to fully cook. Watch hot dogs carefully to avoid burning or blistering.
4. After dogs are cooked, reduce heat control setting to #1. This will keep hot dogs at desired temperature. Hot dogs can be kept on the rotisserie for several hours without shriveling or having loss of flavor.

**Events Party & Tent Rentals, LLC**  
**2 Main St PO BOX 205**  
**Georgetown, CT 06829**  
**(203) 544-7368 Fax (203) 544-0009**  
**[www.eventsct.com](http://www.eventsct.com)**