

# Events

PARTY & TENT RENTALS



## Sno-Kone Machine Instructions

**This Sno-Kone machine requires a dedicated  
15 amp outlet!**

1. Raise pusher handle and fill the gooseneck of the machine about an inch from the top with ice cubes or block ice. Block ice should be broken up into 3 or 4 pieces for the best snow.
2. Lower pusher handle and turn power switch on.
3. Hold down red button and apply firm even pressure as you push down the pusher handle of the gooseneck. This will force the ice to press against the cutter blade and fall into the bottom of the machine.
4. Scoop ice into sno-kone cup and add syrup flavor of your choice.
5. Never put hands into gooseneck of machine while it is running!

**Events Party & Tent Rentals, LLC  
2 Main St PO BOX 205  
Georgetown, CT 06829  
(203) 544-7368 Fax (203) 544-0009  
www.eventsct.com**