

General Instructions for Use

DO NOT PLUG POWER CORD IN UNTIL LATER

Unpack Speakers, Microphone, & Cables

Includes: Mixer/Amp, 2 Speakers with Cables, Power Cord, Auxiliary Input RCA Cable, Auxiliary Input MP3/iPOD Cable, Microphone with Cable


Set All Controls to 0 (Zero)

All Volume Controls to 0
 Base, Treble, & Reverb to 0
 5 Band Graphic Equalizer (FLS) to 0




Set Up and Connect Speakers

Expand Base of Speaker Stand and Tighten Screw
 Lengthen Top of Speaker Stand, Insert Safety Pin, and Tighten Screw

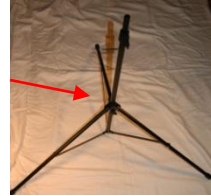

Connect 25 Foot Speaker Cable to Speaker and Mixer/Amp


Set Speakers on Speaker Stands
 (Small Mounting Hole on Bottom)

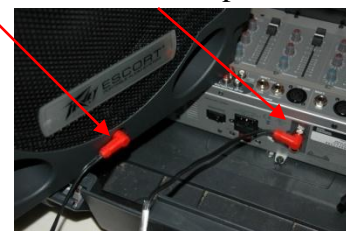

Connect Input Device(s) – Examples shown Below



Wired Microphone
 (Musical Instrument)

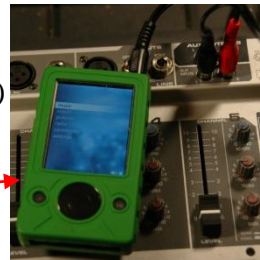


MP3/iPOD Player



CD/DVD/TV/Other

Wireless Microphone

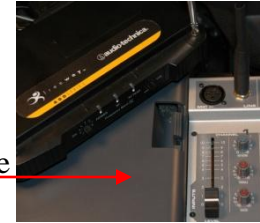

Connect POWER PLUG and Turn On



Suggestions

Spread Speakers to the Sides in Front of the Input Devices, Facing the Audience, to Avoid Feedback
 Feedback Will Show Up on the Graphic Equalizer as a Red Light, Reduce the Level of the Slider to Reduce Feedback
 If Moving the Input Device or Speakers Doesn't Work



Shutting Down the System

Return all Volume Levels to Zero, Turn Off the Power, Disconnect all the Cables, and Pack Up the Unit

