

# Events

PARTY & TENT RENTALS



## COTTON CANDY DIRECTIONS

Always follow all safety instructions affixed to this machine.

### Controls and functions:

1. Main switch turns motor on or off and supplies current to the heat switch.
2. Heat switch turns current to the ribbon on or off.
3. Heat control increases or decreases voltage to ribbon wire-heating element using a gradual dial. All settings are at line voltage or below.
4. Plug in the machine to any dedicated 20amp outlet.

To make the floss:

1. Turn both main and heat switches all the way on. Once machine is warm it is ready for use.
2. Place circular metal tub with netting and attach to the top of machine.
3. Adjust heat to a lower temperature before adding sugar.
4. Pour sugar into spinning head (no more than a  $\frac{1}{4}$  cup) at a time.
5. Take the cone, holding it at the pointed end, and roll in the web of floss.
6. If floss starts to float outside tub turn down the heat.

**Enjoy!**

