

# Events

PARTY & TENT RENTALS



## Popcorn Machine Instructions

**This popcorn machine requires a dedicated 20 amp outlet!**

1. There are three switches on the popcorn machine:
  - The kettle motor and exhaust which powers the kettle.
  - The heat switch which heats the kettle.
  - The light switch which operates the lights on the inside of the machine.
2. Turn all switches on.
3. For first batch only, let kettle warm up for about 4 minutes.
4. Load pre-measured oil into kettle. If oil is solid, let oil warm in kettle for a minute or two.
5. Add pre-measured corn into kettle. Close lid and allow to pop. Use only one packet of pre-measured corn at a time!!!!
6. Popcorn will start to open kettle lid and fall into bottom of machine.
7. Listen for popping sound to stop – dump kettle immediately after popping stops or kettle will burn. If you have burned corn or excessive smoke, turn kettle heat off for a few minutes.
8. Repeat steps 4 thru 7 and enjoy! Remember to always pop at least 5 batches each time you use the machine and keep both kettle switches off when not popping!
9. When popping your last batch, turn kettle heat switch off as soon as corn starts popping rapidly.

**Events Party & Tent Rentals, LLC**  
**2 Main St PO BOX 205**  
**Georgetown, CT 06829**  
**(203) 544-7368 Fax (203) 544-0009**  
**www.eventsct.com**