


# General Instructions for Use

## DO NOT PLUG POWER CORD IN UNTIL LATER

### Unpack Equipment

Includes: Microphone, Foam Cover, Clothes Clip, Transmitter, Receiver, Power Cord, and Audio Cable (2 X AA batteries installed in Microphone)

### Connect Receiver to Amp/Mixer

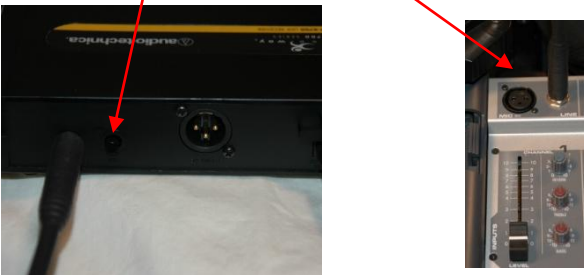

### Extend Antennas and position at 45 Degrees



### Microphone Will Work Up To 200' From the Receiver with Correct Placement

Try to Maintain LINE OF SIGHT Between the Microphone and the Receiver  
Maintain at Least 6' Between the Microphone and the Receiver  
Maintain at Least 3' from the Wall and the Floor to the Receiver  
Keep the Receiver away from other Transmitters and Flat Metal Surfaces

## Plug the AC Power Cord into the Receiver

### Turn the Microphone on by Pushing and Holding the Button on the End of the Microphone for at Least 2 Seconds

There is a Green Light in the Center When On  
One of the Diversity Lights on the Receiver will Turn On (if this Doesn't Happen see Channel Set Up Below)



### CHANNEL SET UP

The Microphone/Receiver can Operate on 8 Different Channels. The Pair are Typically Set Up For Channel 2 as Shown Here. This can be Changed but MUST BE THE SAME ON BOTH UNITS. The Microphone Channel Can be Changed Sliding the Back Off and Using the Included Screwdriver. The Receiver is Changed From the Front Panel (Use the Select Button to Pick a Channel and then Hold the Set Button to Keep this Pick)



### Batteries

2 X AA  
Lasts Approximately 12 Hours  
Accessed by Sliding the Back Off



### To Mute the Microphone Briefly Push the Side Button on the Microphone

There is a Red Light in the Center When Muted

